



Terminal Date and Time Update Instructions

Dejavoo Terminals Change Date and Time

1. From "Swipe" Screen press the green **Enter** key
2. Press the down arrow to *UTILITY* and press the green **Enter** key
3. Highlight *SETTINGS* and press the green **Enter** key
4. Highlight *DATE AND TIME* and press the green **Enter** key
5. Press the yellow **Clear** key to delete the date currently in device
6. Enter correct date in **MMDDYYYY** format and press the green **Enter** key
7. Press the yellow **Clear** key to delete the *time* currently in device
8. Enter correct *time* in the military format (**HHMMSS**) and press **Enter**
9. Device will return to the *SETTINGS* main menu

FD Terminals Change Date and Time

1. Touch System
2. Touch Date/Time Date/Time Correct?
3. Touch No Enter New Time (Enter in Military Time- Press Alpha Alpha →
to get the :)
4. Press Enter Enter New Date (Press Alpha Alpha Alpha → to get /)
5. Press Enter Date/Time Correct?
6. Touch Yes Load Vers Setup
7. Press Red Clear Key

Verifone VX and Omni Series Change Date and Time

1. PRESS [▼] KEY, SELECT **OTHER SET UP** or Press [ENTER] KEY AND SELECT **SETUP**
2. PASSWORD **1 ALPHA ALPHA 66831**, Press [ENTER] Key,
3. PRESS [▼] Key, SELECT **DATE/TIME**,
4. Key in CURRENT DATE MM/DD/YYYY, Press [ENTER] Key,
5. Key in CURRENT TIME HH/MM/SS, Press [ENTER] Key,
6. Press RED [X] Key TO EXIT TO IDLE SCREEN.

Nurit 2085/3010/8000 Change Date and Time

1. Press [Menu/ESC]
2. Select [5] for system options
3. Select [1] for Set Time/date
4. Make necessary changes (time must be in military)
5. Press [Enter] when complete
6. Press [Menu/ESC] to return to the main screen

Omni 3200/3200SE Change Date and Time

1. Press [▼][▼] Key, Select [F1] for “OTHER SET UP”,
2. PASSWORD ? 1 ALPHA ALPHA 66831, Press [ENTER] Key,
3. PRESS [▼][▼][▼]Key, SELECT DATE/TIME,
4. Key in CURRENT DATE MM/DD/YYYY, Press [ENTER] Key,
5. Key in CURRENT TIME HH/MM/SS (Military time), Press [ENTER] Key,
6. Press RED [CLEAR] Key TO EXIT TO IDLE SCREEN.

Hypercom T7P/T77/T7Plus Change Date and Time

[Function] 10, ENTER---- Date

[Function] 11, ENTER---- Time

4.2.13.11 Function 11, Terminal Time

Allow the user to change time for the terminal at the terminal level.

Step 1 [10][Enter].

MERCHANT FUNCTION

Step 2 Enter Password.

TERMINAL TIME
ENTER PASSWORD

Step 3 Enter the date.
HH – Hour.
MM – Minute.

CHANGE SYS DATE/TIME
ENTER DATE HHMM